

HP® 1200 TO 1150 • 1300 CARTRIDGE CONVERSION INSTRUCTIONS



HP 1200 TONER CARTRIDGE

CONVERTING AN HP 1200 CARTRIDGE TO WORK IN AN HP 1150/1300 PRINTER

By the Technical Staff at UniNet




Converting an HP 1200 cartridge to work in an HP 1150/1300 printer is very easy. What you need is a fully-assembled universal waste section, with new left and right end caps, and special headed pins, as well as the wiper blade, PCR, and OPC drum fitted.

After splitting the HP 1200 cartridge core, the feed section can be remanufactured in the normal way. From the original waste section, remove the OPC drum, wiper blade, and the PCR and save for reuse or replacement. The old plastic waste hopper can be discarded along with the old HP 1200 end caps. Take the new universal waste section and assemble in a normal fashion as follows:

1. Lubricate the wiper blade along its edges with your preferred wiper blade lubricant.
2. Properly place the wiper blade on the universal waste section. Check to make sure the corners of the blade do not overlap on the left and right “L” shaped foams. Install the wiper blade screws.
3. Lubricate the inside of the black (left) and white (right) PCR saddles with silicone grease.
4. Clip the PCR into the left and right saddles.
5. Assemble the OPC drum to the universal waste section by placing the drum on the left and right “L” shaped foams. The best method is to assemble the axle to the drum.
6. Install the drum retainer on the right side.
7. Fully insert the drum axle into the universal waste section housing. This completes the assembly.
8. Install the completed universal waste section on the remanufactured feed/hopper side using the new left and right end caps and special headed pins. These headed pins allow for easy removal and disassembly of the cartridge for future remanufacturing.

The cartridge you just assembled can now work in an HP 1200 and 1300 printer. **NOTE:** If the cartridge is required to work in the HP 1150 printer, a small plastic “trigger-arm” must be fitted on the top of the universal waste section.

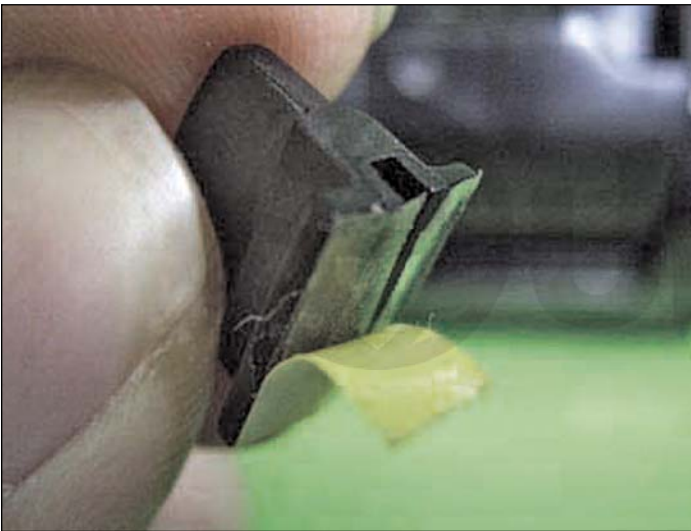

UniNet®

INSTALLING THE PLASTIC TRIGGER-ARM

9. Remove the protective liner from the adhesive on the bottom of the trigger-arm shown.



10. Place the trigger-arm onto the rib shown near the top left corner of the waste section. This rib aligns the trigger-arm to its correct position. **NOTE:** For a higher capacity cartridge you may want to consider using a 350g Jumbo hopper.